


Installation of easyCAN

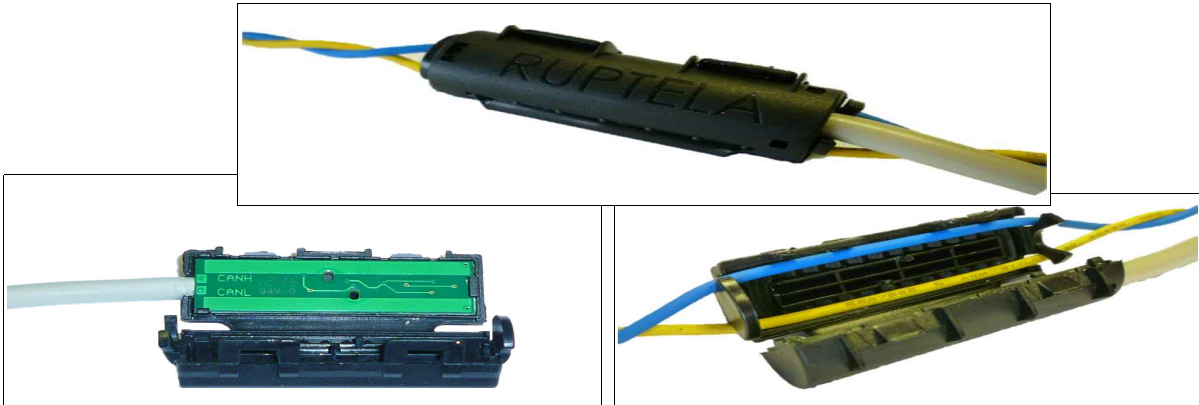

1, 2, 3 images. Example how vehicle's CAN H and CAN L wires are installed into easyCAN

Important! FM-Tco3, FM-Pro3 and FM-Pro3-GLONASS devices have to be specially physically prepared to work with easyCAN. CAN wires of vehicle have to be installed into easyCAN as shown in images 1, 2, 3. There are 4 wires of easyCAN itself (image 4): yellow, green, white and brown. Yellow is for CAN H, green is for CAN L, white is for +5V, brown is for chassis. You can see visually how they are connected to the device in the scheme:

Brown	CHASSIS #	2	1	PORTB RX
White	OUT+5V	4	3	PORTB TX
	DATA	6	5	PORTA A
Yellow	CAN H	8	7	PORTA B
Green	CAN L	10	9	L LINE
	CHASSIS #	12	11	K LINE



4 image. 4 wires of easyCAN which have to be connected to the device